 


## Pay-Per-View (PPV) Made Easy

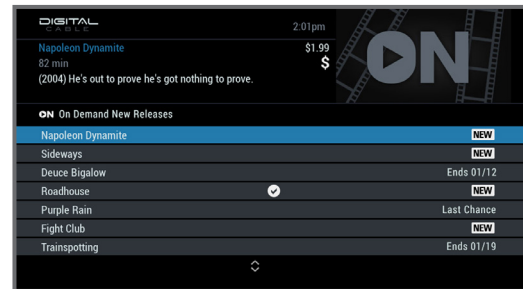


Ordering PPV<sup>1</sup> movies and events is easy with i-Guide. From the **Quick Menu**<sup>2</sup> or **Main Menu**,<sup>2</sup> select the PPV option to see a list of available programs.

Use your remote to get detailed information, watch a preview, and place an order.


## Parental Controls

Parental Controls allow you to restrict viewing and purchases of shows. Set a Locks PIN to restrict viewing of specific titles, channels, and parental ratings.

Set a Purchase PIN to restrict purchases of shows. Parental Controls can also stop adult titles from displaying on the Program Guide.

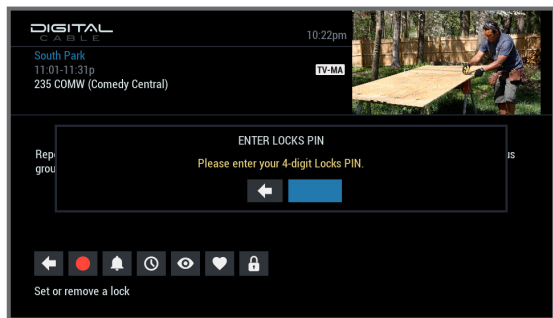


 Select **Parental Controls** from the **Main Menu** or select from the **Quick Menu** or program **Info** screen.

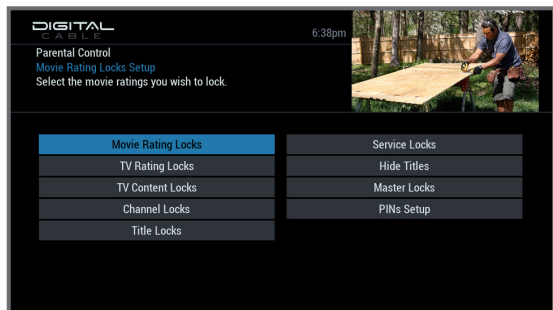

## Go Ahead, Play Favorites


Create up to four **Favorites** lists – one for everyone in the family. Select from the **Quick Menu** or program **Info** screen, or select **My Favorite Channels** from the **Main Menu**.

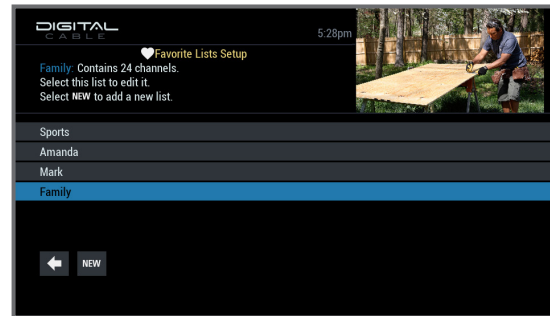


## Enhanced Searching

i-Guide offers expanded search capabilities so you can find your favorite shows faster and discover new ones. Select **Search** from the **Main Menu** or select from the **Quick Menu**.

 Browse by category or search by title, keyword, or actor/director. Search TV Listings, On Demand, and Pay-Per-View.

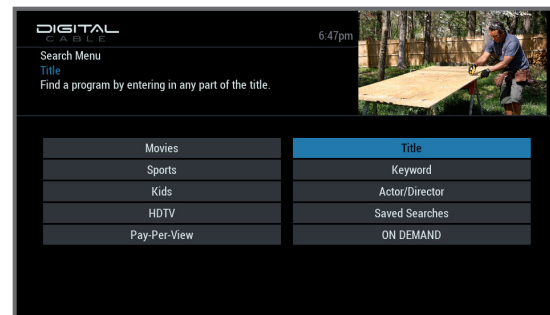

To search by title, keyword, or actor/director, simply use the on-screen keyboard to spell out a title, topic, or name. i-Guide will display a list of matching shows. You can select **Save Search** or set an **Auto-Record** right from the **Search** results screen.

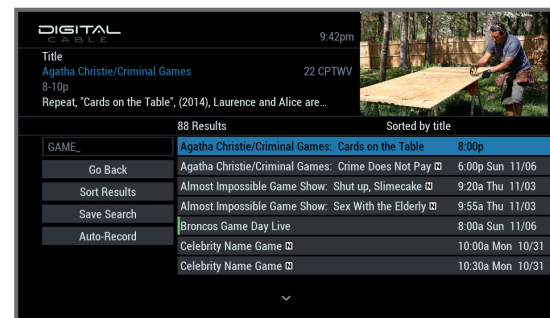


# On Demand Brings the Video Store to You

**On Demand**<sup>1</sup> is a library of movies, series, and programs you can rent and watch whenever you want, as many times as you like within the rental period. It's like having a movie theater right in your living room.

There are several ways to start On Demand. You can just press the **ON DEMAND** button on your remote. Or you can select **On Demand** from the **Main Menu** or select from the **Quick Menu**. Starting On Demand brings up the **On Demand Dashboard**.
 
## On Demand Dashboard

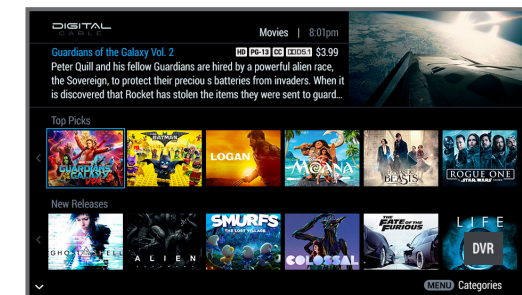

Navigate with the arrow buttons on your remote. Or move around faster with , , Page , Page , Day+, Day-.

The **On Demand Dashboard** presents the top VOD choices available. Browse the posters of movies and TV series in rows of genres and categories for a show you'd like to watch.

- To browse the posters, use the arrow , , , buttons.
- Press **OK/Select** to watch a preview or rent a show.
- Press **Menu** for the Dashboard menu.
- Press **Exit** to return to live TV.




For the complete On Demand library, with thousands more additional movies and shows, go to the **Full On Demand Catalog**. There you can browse categories and search by title, actor, director, or keyword.

On the **On Demand Dashboard**, do one of the following to bring up the **Full On Demand Catalog**:

- Press the **Menu** button on your remote to bring up the **On Demand Dashboard** menu. Then select the icon.
- Or scroll to the end of a row and select the **Full On Demand Catalog** tile.

To get back to the **On Demand Dashboard**, press the **Last** key.

## Full On Demand Catalog Menu

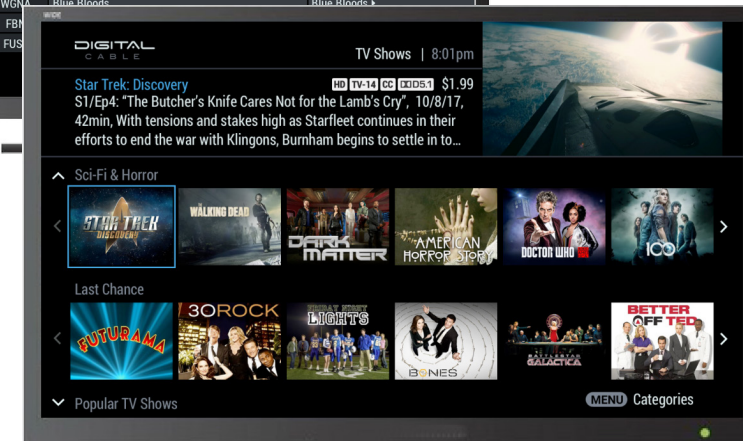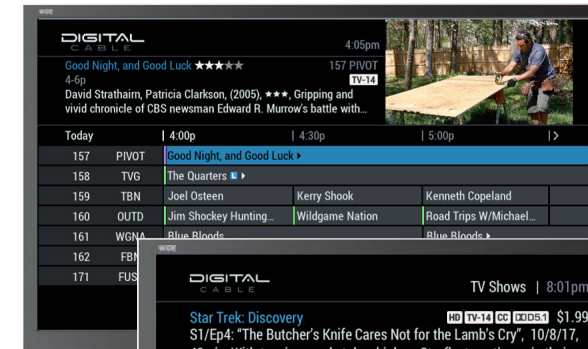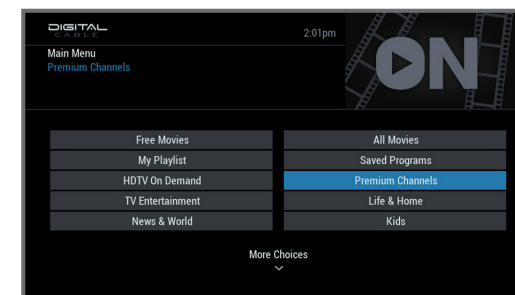

# Inside i-Guide®

## Quick Reference Guide

Version R33

<sup>1</sup> PPV, On Demand, and DVR not available in all areas. On Demand programs may not be recorded with DVR.  
<sup>2</sup> Menu selections vary depending on the services your cable provider offers.  
<sup>3</sup> HD programming is not available in all areas or for all channels. See your cable provider for details.



## Enhance Your Digital Cable Experience

With i-Guide, it's easy to find and watch the programs you love. Enhanced search capabilities and DVR recording management tools let you enjoy your favorite shows anytime.

## Remote Control Features

### Basic i-Guide Navigation

- It's easy to get started. Press a button such as **Guide** or **Menu** on your remote.
- Press the arrow buttons ◀ ▶ ▲ ▼ to move the highlight.
- Press **OK/Select** to make or confirm a selection or tune to a show or access program information.
- Press **Last** to return to a previous i-Guide screen.
- Press **Exit** to exit i-Guide and return to watching TV.



### Channel Controls

Use the **CH** and **VOL** buttons on your remote to change channels and volume. You can also enter a channel number with the number buttons.

When you change to a channel, the **Flip Bar** displays information about the program for a few seconds.


### Control Live TV

Anytime you tune to a channel the DVR starts a temporary recording so you can **pause** (⏸) if the phone rings, **rewind** (⏮) the scene you missed, and **fast-forward** (⏭) to skip what you don't want to watch.





## DVR Puts You In Control



### Build Your Own Personal Video Library

It's easy to record with i-Guide. For easy one-touch recording, press **REC** on your remote anytime while watching TV or using the **Program Guide** or **Mini Guide**. To set up a one-time or series recording, select  from the program **Info** screen or select **DVR** from the **Quick Menu** or **Main Menu**.

### Your Recordings

#### Your Way

i-Guide makes it easy to manage your recordings. Get to the **DVR Menu** from **DVR** on the **Main Menu** or from  on the **Quick Menu** or from  on the program **Info** screen. From there, select **My Recordings** to view your list.

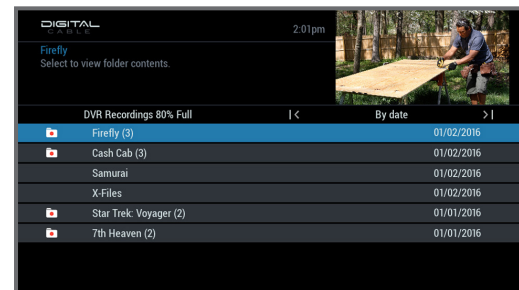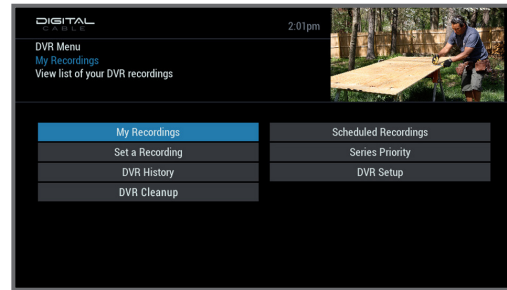


Series recordings are automatically grouped into folders so you can quickly scroll through your list.

Use the ▲ ▼ arrows to select a series and press **OK/Select**. Scroll through the list to find the episode you want.

### DVR Cleanup


lets you delete multiple shows at once, while **DVR History** keeps track of shows that were deleted. i-Guide makes it simple to organize your shows so you can enjoy watching on your schedule.

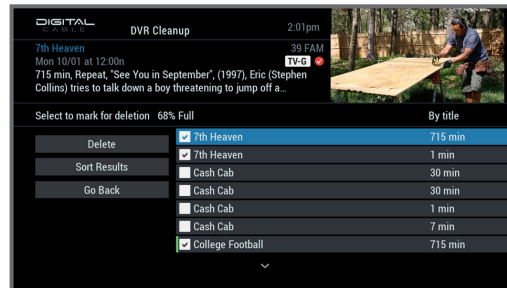

## Quick Menu: Quick & Easy

The **Quick Menu**<sup>2</sup> offers shortcuts to key i-Guide features.


Just press **Menu** on your remote while you are using the guide or watching TV. You'll have easy access to your **DVR**, **On Demand**, **HD** programs, **Search** features, and **Parental Controls**.

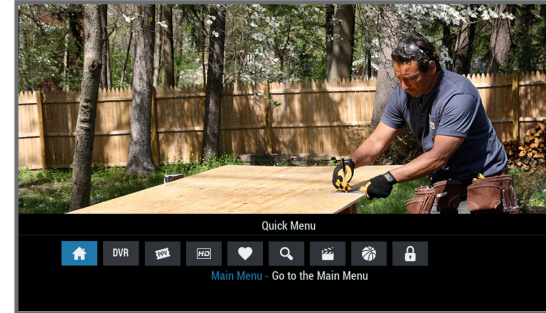

Press the ◀ ▶ arrows on your remote to highlight a menu option. Then press **OK/Select** and you're on your way.

## All Access With Main Menu

From the **Main Menu**,<sup>2</sup> you can access all i-Guide features. Press **Menu** twice, then select from the options, including **Listings By Time**, **Search**, **DVR**, **Local Weather**, **Setup**, and more.

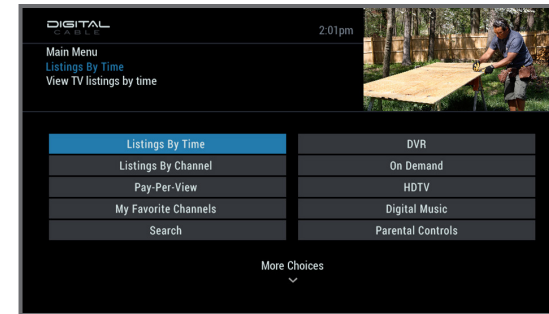

## Program Guide

 
Press **Guide** to access **Listings By Time**.

Use the ◀ ▶ ▲ ▼ arrows to navigate the channel lineup and look ahead at upcoming shows.

Press **Guide** again on a channel to see the **Listings by Channel**.

To select a program on the schedule, press **OK/Select**.

Use the program indicators when you're browsing shows:

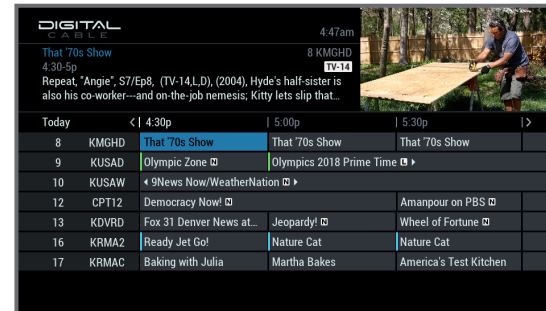

Navigate with the arrow buttons ◀ ▶ ▲ ▼ on your remote. Or move around faster with ▶▶, ◀◀, Page ▼, Page ▲, Day+, Day-.


**Green** – Sports  
**Purple** – Movies  
**Light Blue** – Kids

**N** – New program  
**L** – Live program  
**L** – Live program on now

## Mini Guide

The **Mini Guide** lets you view listings while you watch a program.

Press **OK/Select** to bring up the **Mini Guide**, then use the ◀ ▶ arrows to browse time and the ▲ ▼ arrows to browse channels.

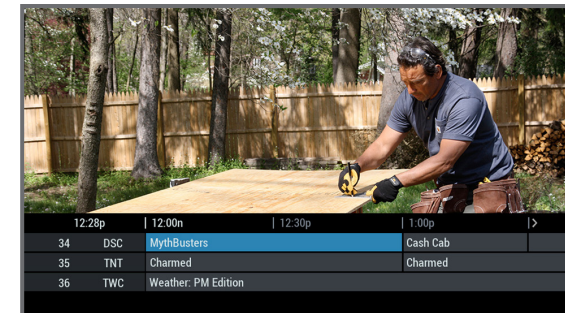

## Smart Channel Surfing

Program information displays on the **Flip Bar** when you change channels or press the **Info** button. For programs available on On Demand or HD channels, icons appear that you can select. You can configure HD Auto-tune to automatically tune to an available HD channel.<sup>3</sup>

 


## Program Info Action Icons

The program **Info** screen offers action icons you can execute: set a favorite, reminder, recording, or parental control lock, and more.

From the **Program Guide**, just press **Info**.

While watching a program, pressing **Info** toggles between the **Flip Bar**, the program **Info** screen, and live TV.

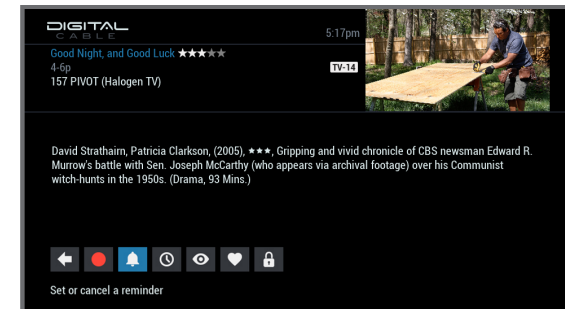

Use the arrow ◀ ▶ buttons to highlight an action icon. Press **OK/Select** to select the action.